

IMPORTANT NOTICE

NO. 200 & 250 ROSEBUD HEATING HEADS

Please note that rosebud head sizes 200 and 250 are equipped with mixers. They are required to operate with pressures as specified in the instruction booklet for the torch.

Operating the torch with fuel gas pressure set between 1/2 and 5 psi like other welding and heating heads equipped with injectors will overheat the tip. An overheated tip can cause flashback which can damage the torch and related equipment and possibly injure the operator.



ESAB Welding & Cutting Products
PO Box 100545, Florence SC 29501-0545

F-14-405 3/95

IMPORTANT NOTICE

NO. 200 & 250 ROSEBUD HEATING HEADS

Please note that rosebud head sizes 200 and 250 are equipped with mixers. They are required to operate with pressures as specified in the instruction booklet for the torch.

Operating the torch with fuel gas pressure set between 1/2 and 5 psi like other welding and heating heads equipped with injectors will overheat the tip. An overheated tip can cause flashback which can damage the torch and related equipment and possibly injure the operator.



ESAB Welding & Cutting Products
PO Box 100545, Florence SC 29501-0545

F-14-405 3/95

IMPORTANT NOTICE

NO. 200 & 250 ROSEBUD HEATING HEADS

Please note that rosebud head sizes 200 and 250 are equipped with mixers. They are required to operate with pressures as specified in the instruction booklet for the torch.

Operating the torch with fuel gas pressure set between 1/2 and 5 psi like other welding and heating heads equipped with injectors will overheat the tip. An overheated tip can cause flashback which can damage the torch and related equipment and possibly injure the operator.



ESAB Welding & Cutting Products
PO Box 100545, Florence SC 29501-0545

F-14-405 3/95

IMPORTANT NOTICE

NO. 200 & 250 ROSEBUD HEATING HEADS

Please note that rosebud head sizes 200 and 250 are equipped with mixers. They are required to operate with pressures as specified in the instruction booklet for the torch.

Operating the torch with fuel gas pressure set between 1/2 and 5 psi like other welding and heating heads equipped with injectors will overheat the tip. An overheated tip can cause flashback which can damage the torch and related equipment and possibly injure the operator.



ESAB Welding & Cutting Products
PO Box 100545, Florence SC 29501-0545

F-14-405 3/95