

PREST-O-LITE®

LP-GAS LEAD MELTING FURNACE

NOTICE: Do not attempt to operate this equipment until you have read and fully understand these instructions. Keep these instructions handy for ready reference and review.

CONNECTING:

1. The melting furnace connects to any 5-, 20-, or 40-lb. LP-Gas tank equipped with a 3" plumber's pot valve.
2. Make sure the gasket is in place and then hand-tighten the melting furnace base to the tank valve snugly enough to prevent gas leakage.

LIGHTING:

1. Open the tank valve slightly and then light the gas with a friction lighter.
2. Adjust the tank valve to obtain the desired flame size.

SAFETY PRECAUTIONS:

1. DON'T let LP-Gas escape near any possible source of ignition. Accumulations of gas in certain proportions may explode if ignited.
2. NEVER store LP-Gas tanks (cylinders) in a closed or confined space, such as a closet, tool box, or automobile trunk.
3. NEVER solder a container that contains or has contained flammable liquids or vapors (including gaso-

line, benzene, solvents, and other similar or dissimilar materials) unless the container has been thoroughly purged of all traces of flammable material and vapors.

4. Before starting work always test for leaks around all joints with a soapy water solution.
5. NEVER use a flame to test for leaks of flammable gases.
6. NEVER use a tank with a leaking valve.
7. DON'T attempt any repairs to an LP-Gas tank, except to tighten the packing-gland nut on the valve.
8. DON'T abuse or drop tanks or handle them roughly.
9. NEVER use a tank as a roller. Never use a wrench or pliers on the tank valve.
10. DON'T use equipment that is in need of repairs. Use recommended replacement parts only.
11. DON'T start fires. Be very careful when working near combustible material.
12. Fuel gas tanks (cylinders) are equipped with fusible-metal safety devices. NEVER store tanks near radiators, furnaces, or other heat sources.

**Be sure this information reaches the operator.
You can get extra copies through your supplier.**

